

RENAULT Rafale 2024


Patent pending
MOCSKT 0498

MOCSRROAC0011 cm 124


MOCSRROAL0007 cm 124



1 - L1611/1 ant. sx.

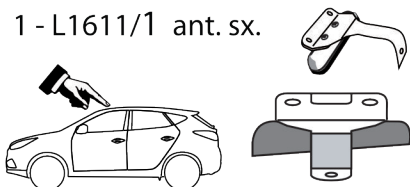

1 - L1545/2 post. sx.

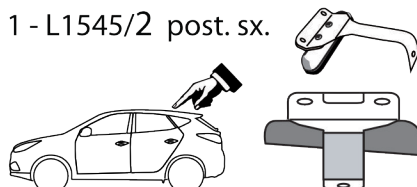

4 - L1058/7



4 - RCVM6X16TSQ
16 mm



4 - RCRD8Q



8 - RCVM6X10Q




1 - RCBR5




1 - RCBR4




1 - L1611/2 ant. dx.

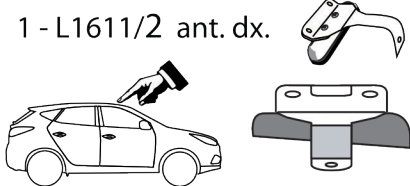


1 - L1545/1 post. dx.

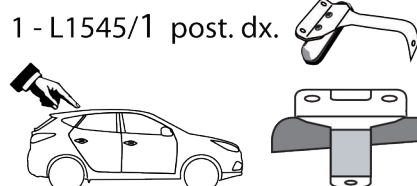


L1611/1

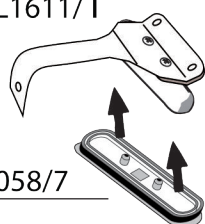

L1058/7

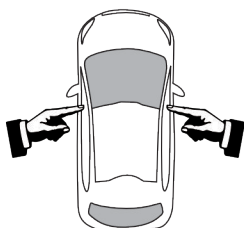


L1611/2

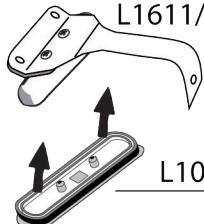


L1058/7


4 Nm

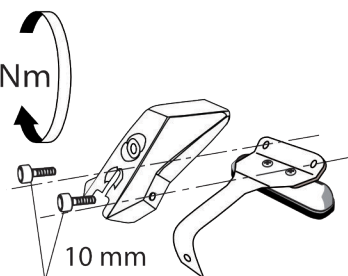


L1545/2

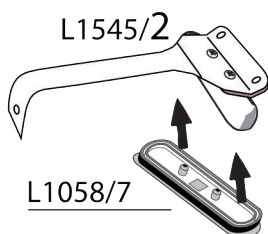

L1058/7

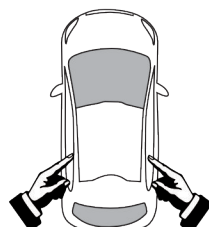


L1545/1

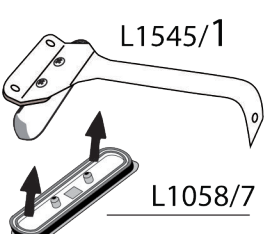


L1058/7





4 Nm

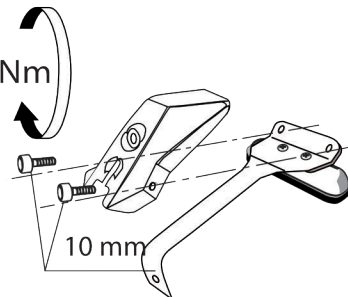

MOCSRROAC0011 cm 124
MOCSRROAL0007 cm 124

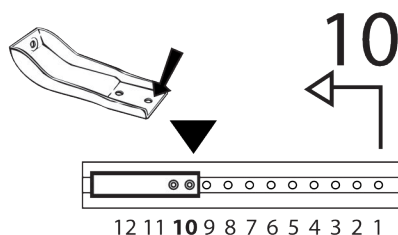

anteriore, avant, front,
vorne, delantera






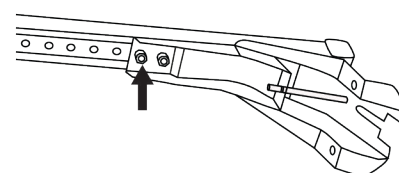
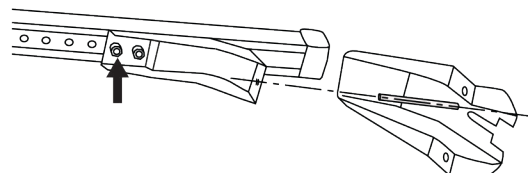
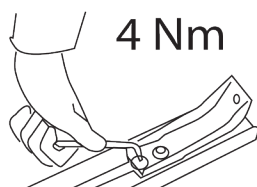
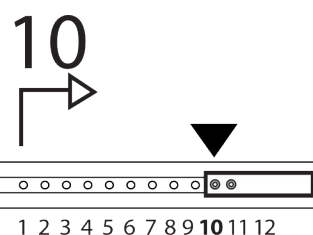


!!!



MOCSRR0AC0011 cm 124

MOCSRR0AL0007 cm 124

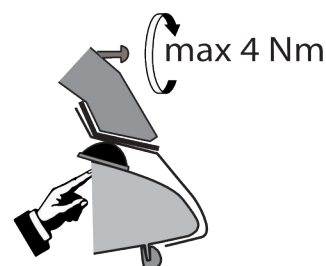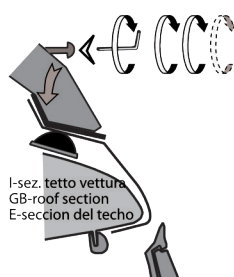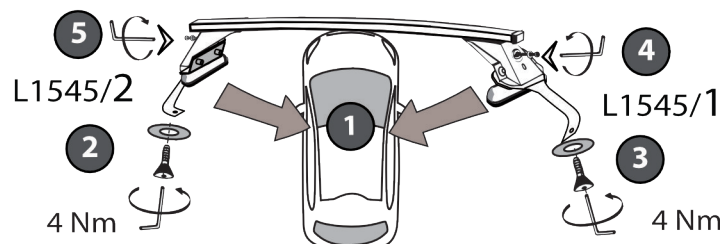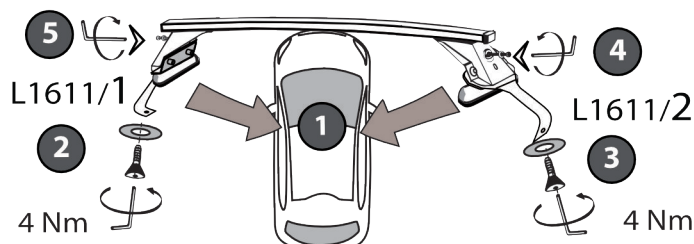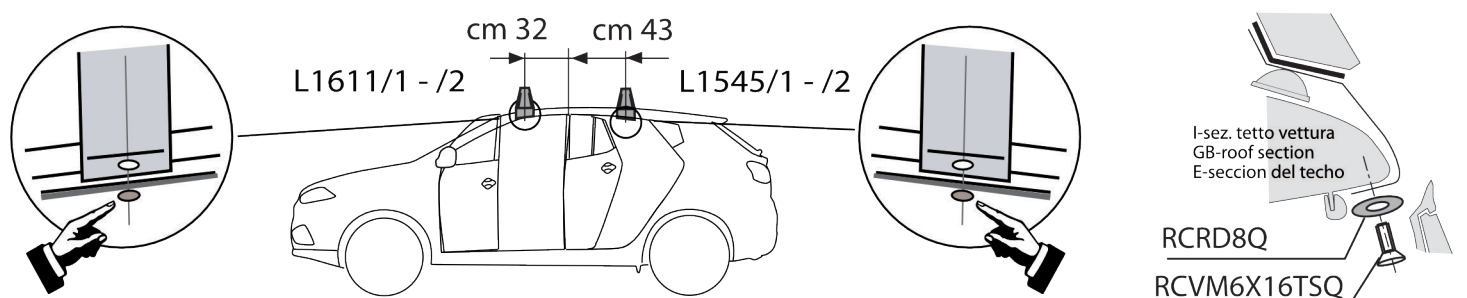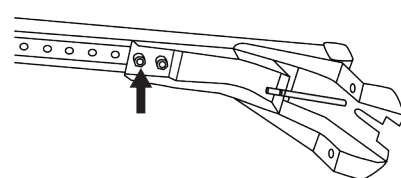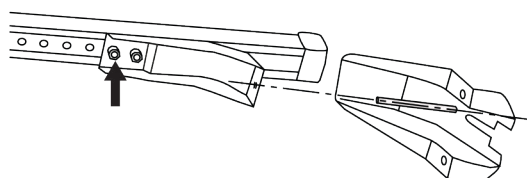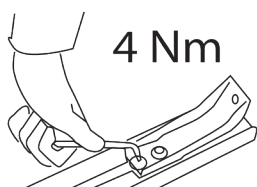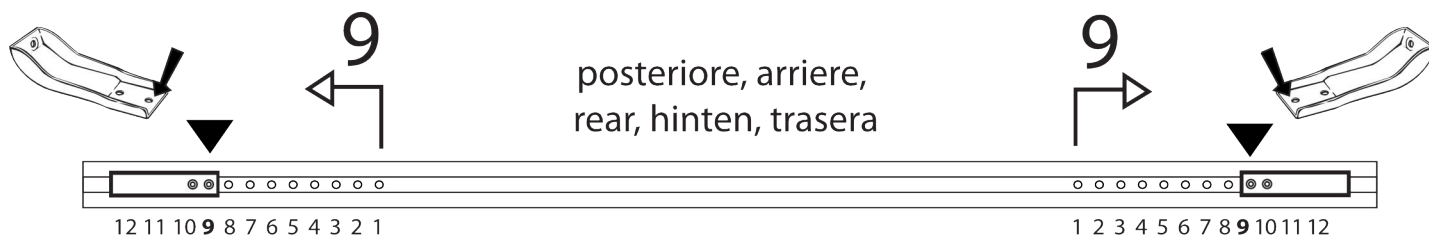

I - Per stringere, usare la chiave come indicato nel disegno. (Non si assumono responsabilità per danni causati dall'impiego di chiavi diverse da quella in dotazione al prodotto).

F - Pour serrer, utiliser la clé comme indiqué ci dessous.

GB - To tighten please use the wrench as per the drawing.

D - Zum Anziehen benutzen Sie bitte den Inbusschlüssel, nur wie auf dem Bild dargestellt.

E - Para el correcto ajuste, utilizar la llave fija tal y como se indica en la imagen

